



NO	HHAW PARTS NO	Q' TY/UNIT	PARTS NAME
1	HWRAC50WPC A01	1	BASE
2	HWRAC50WED A01	1	COMPRESSOR
3	HWRAC50NX2 A04	3	PUSH NUT
4	HWRACDJ50PHAE A02	1	CONDENSER
5	HWRACDJ50PHAE A03	1	REVERSING VALVE
6	HWRAC10GH5 A03	1	3S-VALVE
7	HWRAC50WEA A06	1	SERVICE VALVE
8	HWRAC50WED A03	1	ELECTRIC EXPANSION VALVE
9	HWRAC50WED A04	1	SOUND PROOF
10	HWRAC50WPC A04	1	SOUNDPROOF
11	HWRAC50WEC A07	1	SOUNDPROOF
12	HWRAC50WED A05	1	SOUNDPROOF
13	HWRAC50WPC A05	1	O. L. RCOVER
14	HWRAC50WEA A12	1	CONNECTING CORD (COMP)
15	HWRACDJ18PHAE A06	1	THERMISTOR (DEFROST)
16	HWRAC50NX2 A17	1	THERMISTOR SUPPORT
17	HWRAC18WPC A07	1	COIL (REVERSING VALVE)
18	HWRAC50WED A07	1	COIL (EXPAN. VALVE)
19	HWRAC50WED A08	1	PARTITION
20	HWRACF160MVX 005	1	REACTOR
21	HWRAC50WEB A02	1	FAN MOTOR SUPPORT
22	HWRAC25YHA5 A15	1	FAN MOTOR
23	HWRAC50WEC A12	1	PROPELLER FAN
24	HWRAC50NX2 A25	1	NUT (PROPELLER FAN)
25	HWRAC50NX2 A26	1	SIDE COVER (L)
26	HWRAC50NX2 A27	1	HANDLE
27	HWRACDJ50PHAE A04	1	FRONT COVER
28	HWRAC50WEC A14	1	DISCHARGE GRILL
29	HWRAC50WEA A14	1	EARTH-PLATE
30	HWRACDJ18PHAE A09	1	THERMISTOR (OUTDOOR TEMP.)
31	HWRACDJ50PHAE A05	1	SIDE COVER (R)
32	HWRAC18WSPA A24	1	TC-COVER
33	HWRAC50WEC A15	1	BUTYL
34	HWRAC50WEC A16	1	TERMINAL COVER
35	HWRACSX18HAK A28	1	TOP COVER
36	HWRACDJ50PHAE A09	1	SERVICE VALVE COVER
37	HWRAC50NX2 A36	1	BUSH ASSEMBLY
38	HWRAC50NX2 A37	2	BUSH
39	HWRAC50NX2 A38	1	DRAIN PIPE
40	HWRAC50WEF A03	1	ELECTRIC PARTS PLATE
41	HWRACDJ50PHAE A06	1	ELECTRIC PARTS COVER
42	HWRAC50WEF A05	1	TERMINAL SEAT
43	HWRACDJ50PHAE A07	1	HEAT SINK
44	HWRACDJ50PHAE A01	1	P. W. B. (MAIN)
45	HWRAC50WEF A08	1	SUPPORT1 (P. W. B.)
46	HWRAC50WED A16	1	TERMINAL BOARD (5P)
47	HWRAC50WEF A09	1	FUSE (25A)
48	HWRAC25WXD A11	2	FUSE (3. 15A)
49	HWRACDJ18PHAE A13	1	THERMISTOR
50	HWRACDJ18PHAE A14	1	SPRING
51	HWRACDJ50PHAE A08	1	INSULATION