



CODE TABLE

CODE	NAME	NOTE
MC	MOTOR (for COMPRESSOR use)	
MOF1	MOTOR (for FAN use)	
EF1	POWER FUSE	
RVR	4-WAY SOLENOID VALVE	
SVC	SOLENOID VALVE	
MV	ELECTRONIC EXPANSION VALVE	
CMC	MAG. CONDUCTOR (for COMPRESSOR use)	
TB1	TERMINAL STAND	
TR1	TRANSFORMER	On PCB
PCB1	PRINTED BOARD	
EF1	FUSE	On PCB
EF1,3	FUSE	On PCB
EF1	FUSE	On DIP-IPM
Y22c	AUX. RELAY (for COMPRESSOR and MAGNETIC CONDUCTOR use)	DC COIL
Y22a	AUX. RELAY (for SOLENOID VALVE use)	DC COIL
Y20c	AUX. RELAY (for SOLENOID VALVE use)	DC COIL
Y20a	AUX. RELAY (for SOLENOID VALVE use)	DC COIL
Y21SW	AUX. RELAY (for 4-WAY SOLENOID VALVE use)	DC COIL
Y21	AUX. RELAY (for OIL HEATER use)	DC COIL
DM1	DIODE MODULE	On PCB1
THM7	THERMISTOR (for OUTDOOR TEMPERATURE use)	
THM8	THERMISTOR (for PIPING use)	
THM9	THERMISTOR (for TD use)	
THM	FAN THERMISTOR	
Pd	PRESSURE SENSOR (DISCHARGE SIDE)	
PSH	HIGH PRESSURE SWITCH (for PROTECTION)	
PSL	LOW PRESSURE SWITCH (for CONTROL)	
DCL	REACTOR	
DIP-IPM	INVERTER MODULE	
NF1~3	NOISE FILTER	
PSW1	SWITCH (for FORCED DEFROSTING use)	On PCB
PSW2	SWITCH (for CHECKING use ( ))	On PCB
PSW3	SWITCH (for CHECKING use ( ))	On PCB
DSW1	SWITCH (for TEST RUN use)	On PCB
DSW2	SWITCH (for AUX. FUNCTION SETTING use)	On PCB
DSW3	SWITCH (for OUTDOOR CAPACITY SETTING use)	On PCB
DSW4	SWITCH (for REFRIGERANT SIDE SETTING use)	On PCB
DSW5	SWITCH	On PCB
DSW6	SWITCH	On PCB
RSW1	SWITCH (for REFRIGERANT SIDE SETTING use)	On PCB
CH1,2	OIL HEATER	
DS1,2	PLUG-IN CONNECTOR	
E1,2	EARTH	
CE1,2	TERMINATING CONNECTOR	